



### \_Keyboard

Octave Transpose  
Semitone Transpose  
Reset Transpose  
Set Split Point

### \_Arpeggiator

Arp On/Off  
Arp Hold  
Arp Settings  
Assign Arp to Part 1/2

### \_Chord / Scale

Chord On/Off  
Scale On/Off  
Chord Settings  
Custom Chord  
Assign Chord to Part 1/2

### \_Recorder / Looper

Play / Stop Recording  
Record  
Set / Tap Tempo  
Metronome On/Off  
Recording Settings

Oct- / Oct+  
Shift + Oct-/Oct+  
Oct- + Oct+  
Split + Keyboard Key

Short press Arp  
Shift + Arp  
Long press Arp  
Part 1/2 + Arp

Short press Chord  
Shift + Chord  
Long press Chord  
Hold Chord + Keyboard keys  
Part 1/2 + Chord

Short press ►  
Short press ●  
Shift + ►  
Shift + ●  
Long press ●/►

### \_Navigation

Navigate Presets or Menus  
Select Preset or Menu  
Select Previous Preset or Menu  
Select Next Preset or Menu  
Edit Preset or Menu

Go to previous screen  
Go to Home screen

### \_Multi-Instrument control

Control a Part's Macros  
Add a Part to a Single Preset

Edit a Part  
Edit Part MIDI Settings

### \_Master Control

Set Preset Volume  
Set Master Bass  
Set Master Mid  
Set Master Treble

Turn Wheel  
Press Wheel  
↑  
↓  
Shift + Press Wheel  
or Long Press Wheel  
Back  
Shift + Back

Short press Part 1/2  
Short Press Part 2  
then Press Wheel  
Shift + Part 1/2  
Shift + Split

Shift + Brightness  
Shift + Timbre  
Shift + Time  
Shift + Movement

### \_Preset buttons

Filter all Presets by Type  
Filter the current list by Type  
  
Open/Close current Playlist  
Save current Preset

### \_Effects control

Set FX A Intensity  
Set FX B Intensity  
Activate FX A/B/Delay/Reverb  
Edit FX A/B/Delay/Reverb  
Assign FX A/B to Part 1/2  
Set Delay Time  
Set Reverb Decay

Short press Preset buttons  
Long Press Preset  
buttons  
Playlist  
Shift + Playlist

Shift + FX A  
Shift + FX B  
Short press ◊  
Long press ◊  
Part 1/2 + ◊  
Shift + Delay  
Shift + Reverb